




# MIGHTY LUBE® CLEANING BRUSHES

## For I-Beam Conveyors

### INCLUDED IN THIS PACKAGE

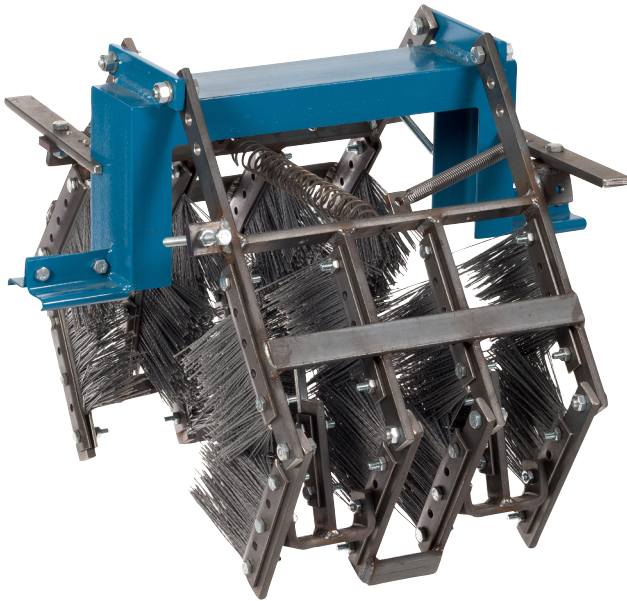

#### I-Beam Conveyor Chain Cleaner Brush Assembly for 3", 4" or 6" I-Beam

- Cleans chain and trolleys
- Removes debris and reduces rejects without contaminating parts
- Adjusts to contact hard to reach points
- Spring loaded to prevent jamming if a hanger passes at an odd angle

**MODEL #300-I** - For Three Inch I-Beam Conveyor

**MODEL #400-I** - For Four Inch I-Beam Conveyor

**MODEL #600-I** - For Six Inch I-Beam Conveyor

*\* Standard assembly includes crimped carbon steel brushes. Assemblies with Carbide Impregnated Nylon brushes are also available.*

### ALSO AVAILABLE:



#### Beam Sweep

- Cleans the web surfaces of the rail
- Reduces debris fall out and improves grounding contact
- Easily installed and removed

**MODEL #3-91BC**  
For Three Inch I-Beam

**MODEL #4-91BC**  
For Four Inch I-Beam

**MODEL #6-91BC**  
For Six Inch I-Beam

#### Yoke Cleaning Brush

- Removes buildup from hard to reach, often overlooked sources of contamination
- Mounting block welds to the bottom of the rail
- Brush is easily replaced



**MODEL #30Y**  
For Three Inch I-Beam

**MODEL #40Y**  
For Four Inch I-Beam




**MIGHTY LUBE®**  
Systematic Lubrication, Inc.

9569 W 40TH ST • FREMONT, MI 49412 | PHONE 231-924-6160

[WWW.MIGHTYLUBE.COM](http://WWW.MIGHTYLUBE.COM)



# 300-I/400-I/600-I CHAIN CLEANER INSTRUCTIONS

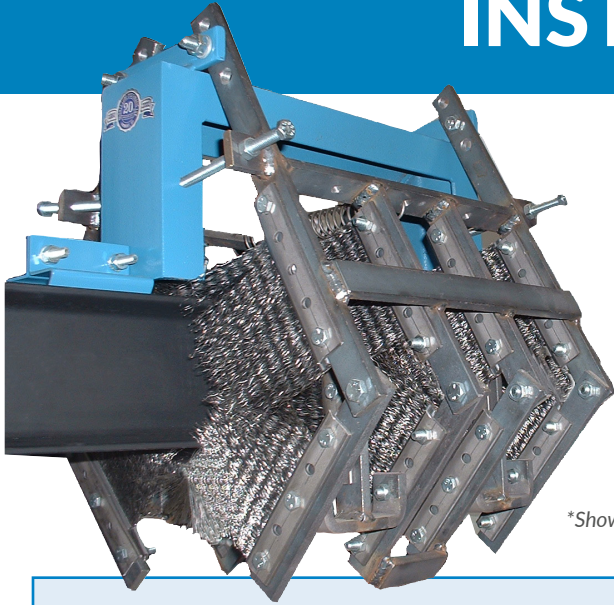

## MODEL #300-I/400-I/600-I

### STAINLESS STEEL REPLACEMENT BRUSHES


#75RB (20)

*\* Standard assembly includes crimped carbon steel brushes.*

*Assemblies with Carbide Impregnated Nylon brushes are also available  
(Part #'s 300-INB/400-INB/600-INB).*

*Carbide Impregnated Nylon replacement brushes are Part # 75NRB*

*\*Shown Installed on Rail*

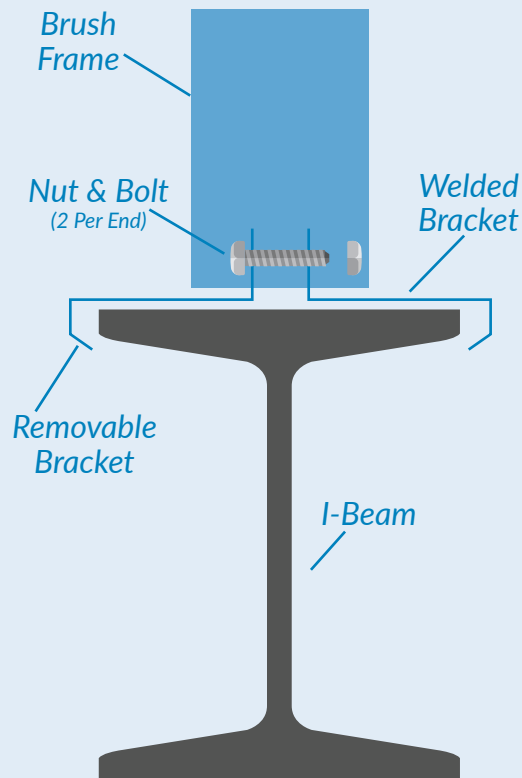

## INSTALLATION

*Complete assemblies are shipped with brushes pre-assembled*

- *Place brush cleaner over i-beam and lower completely onto top of track.*
- *Be sure that welded brackets are attached to upper i-beam flange.*
- *Position removable bracket on opposite side of rail and attach to welded bracket with nuts and bolts provided.*
- *Adjust brush mechanism as necessary for particular application.*

*To Replace Brushes:*

- *Loosen nuts and bolts holding old brushes*
- *Remove old brushes*
- *Insert new brushes into brush channels*
- *Tighten nuts and bolts to secure new brushes*



**MIGHTY LUBE®**  
Systematic Lubrication, Inc.

9569 W 40TH ST • FREMONT, MI 49412 | PHONE 231-924-6160

[WWW.MIGHTYLUBE.COM](http://WWW.MIGHTYLUBE.COM)